






SINGER
457G105,G115,G116,G117


SINGER


ILLUSTRATED PARTS LIST

FORM 30-324 G
(1267/926)


FOR MACHINES: 457 G 105, 457 G 115, 457 G 116, 457 G 117

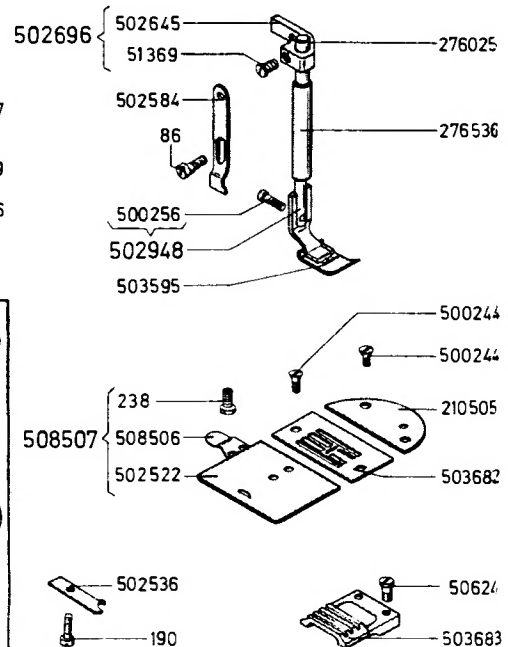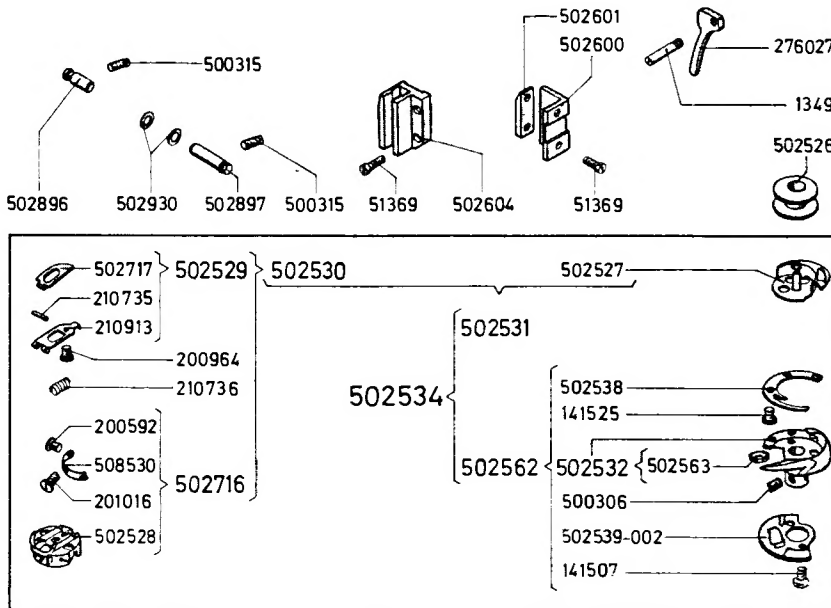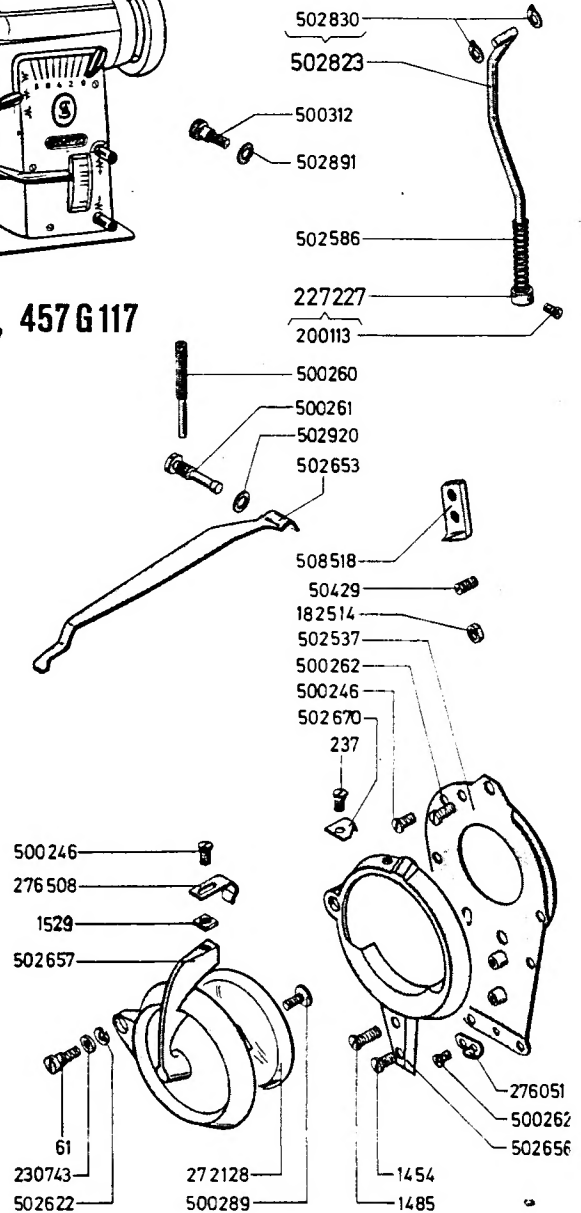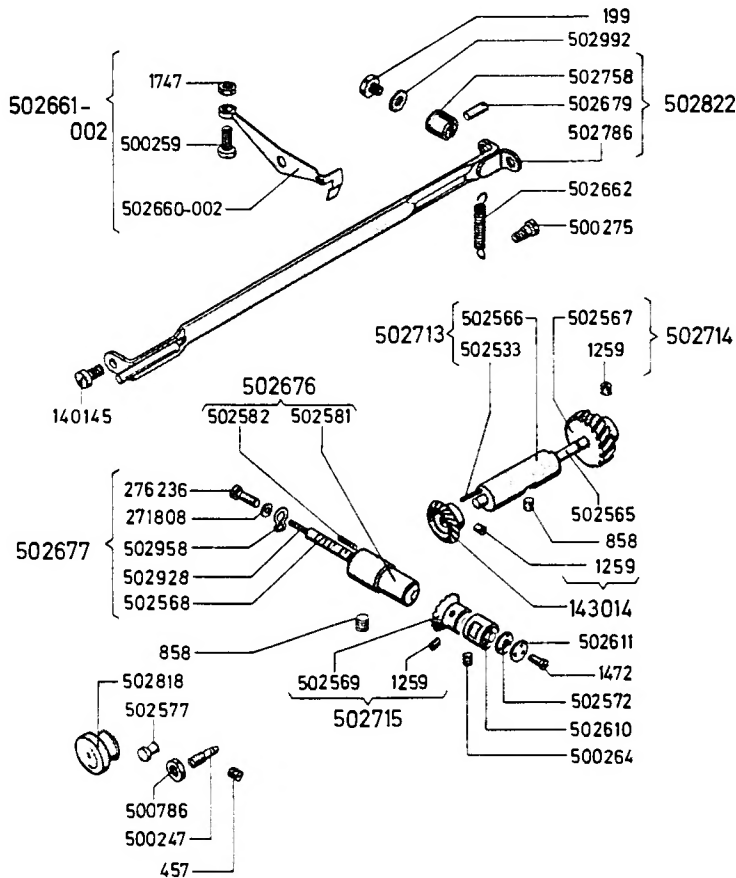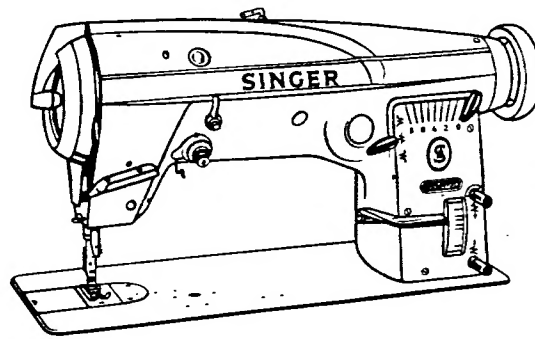

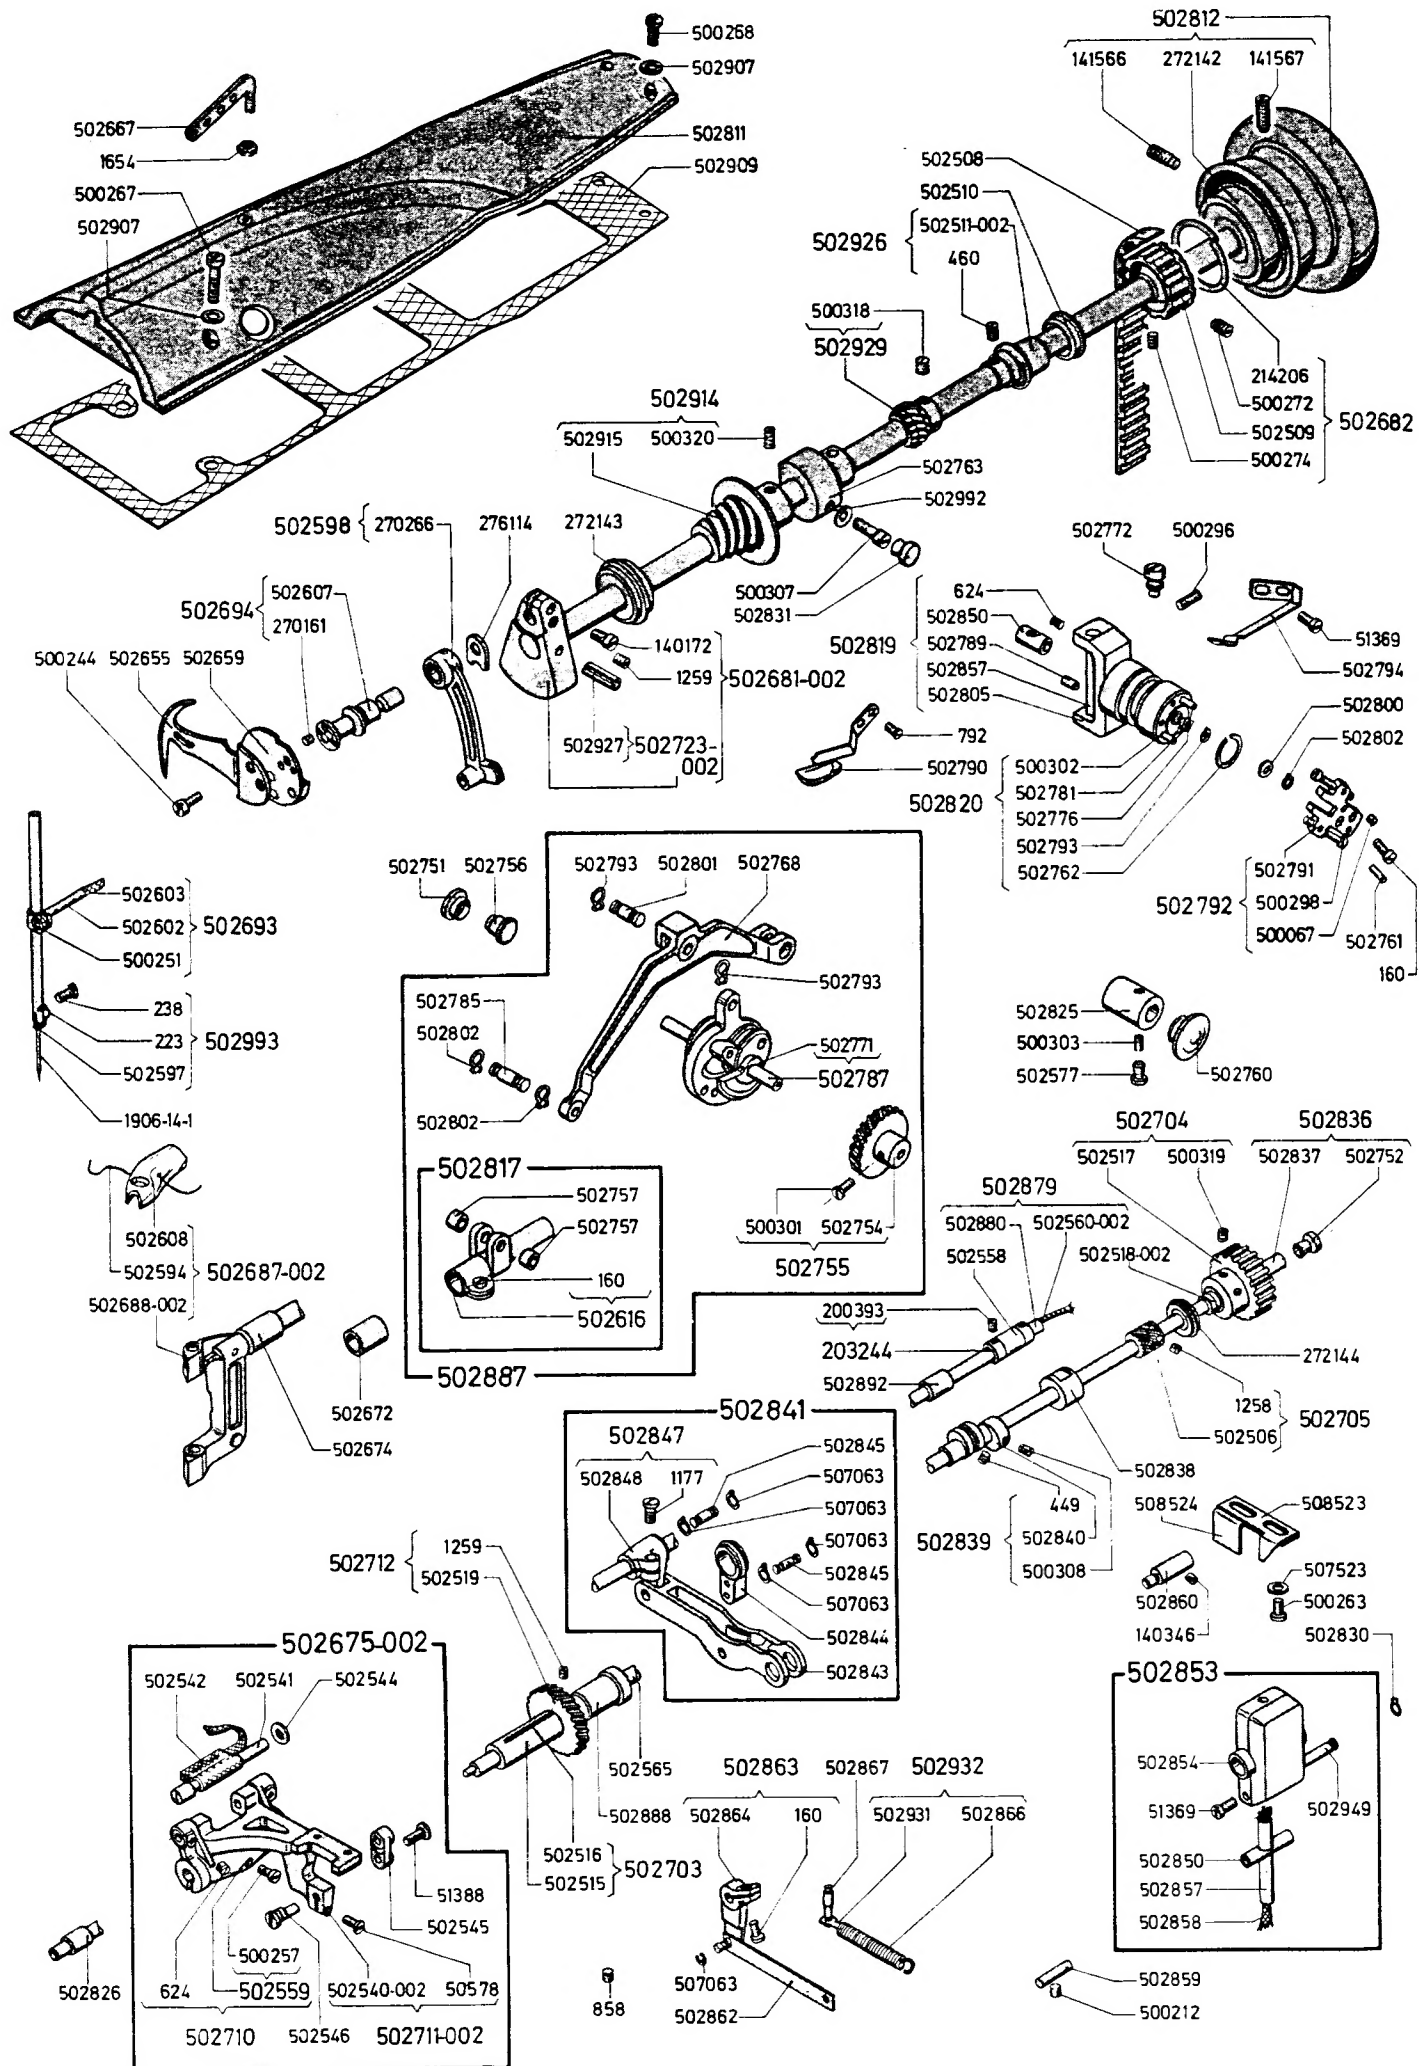


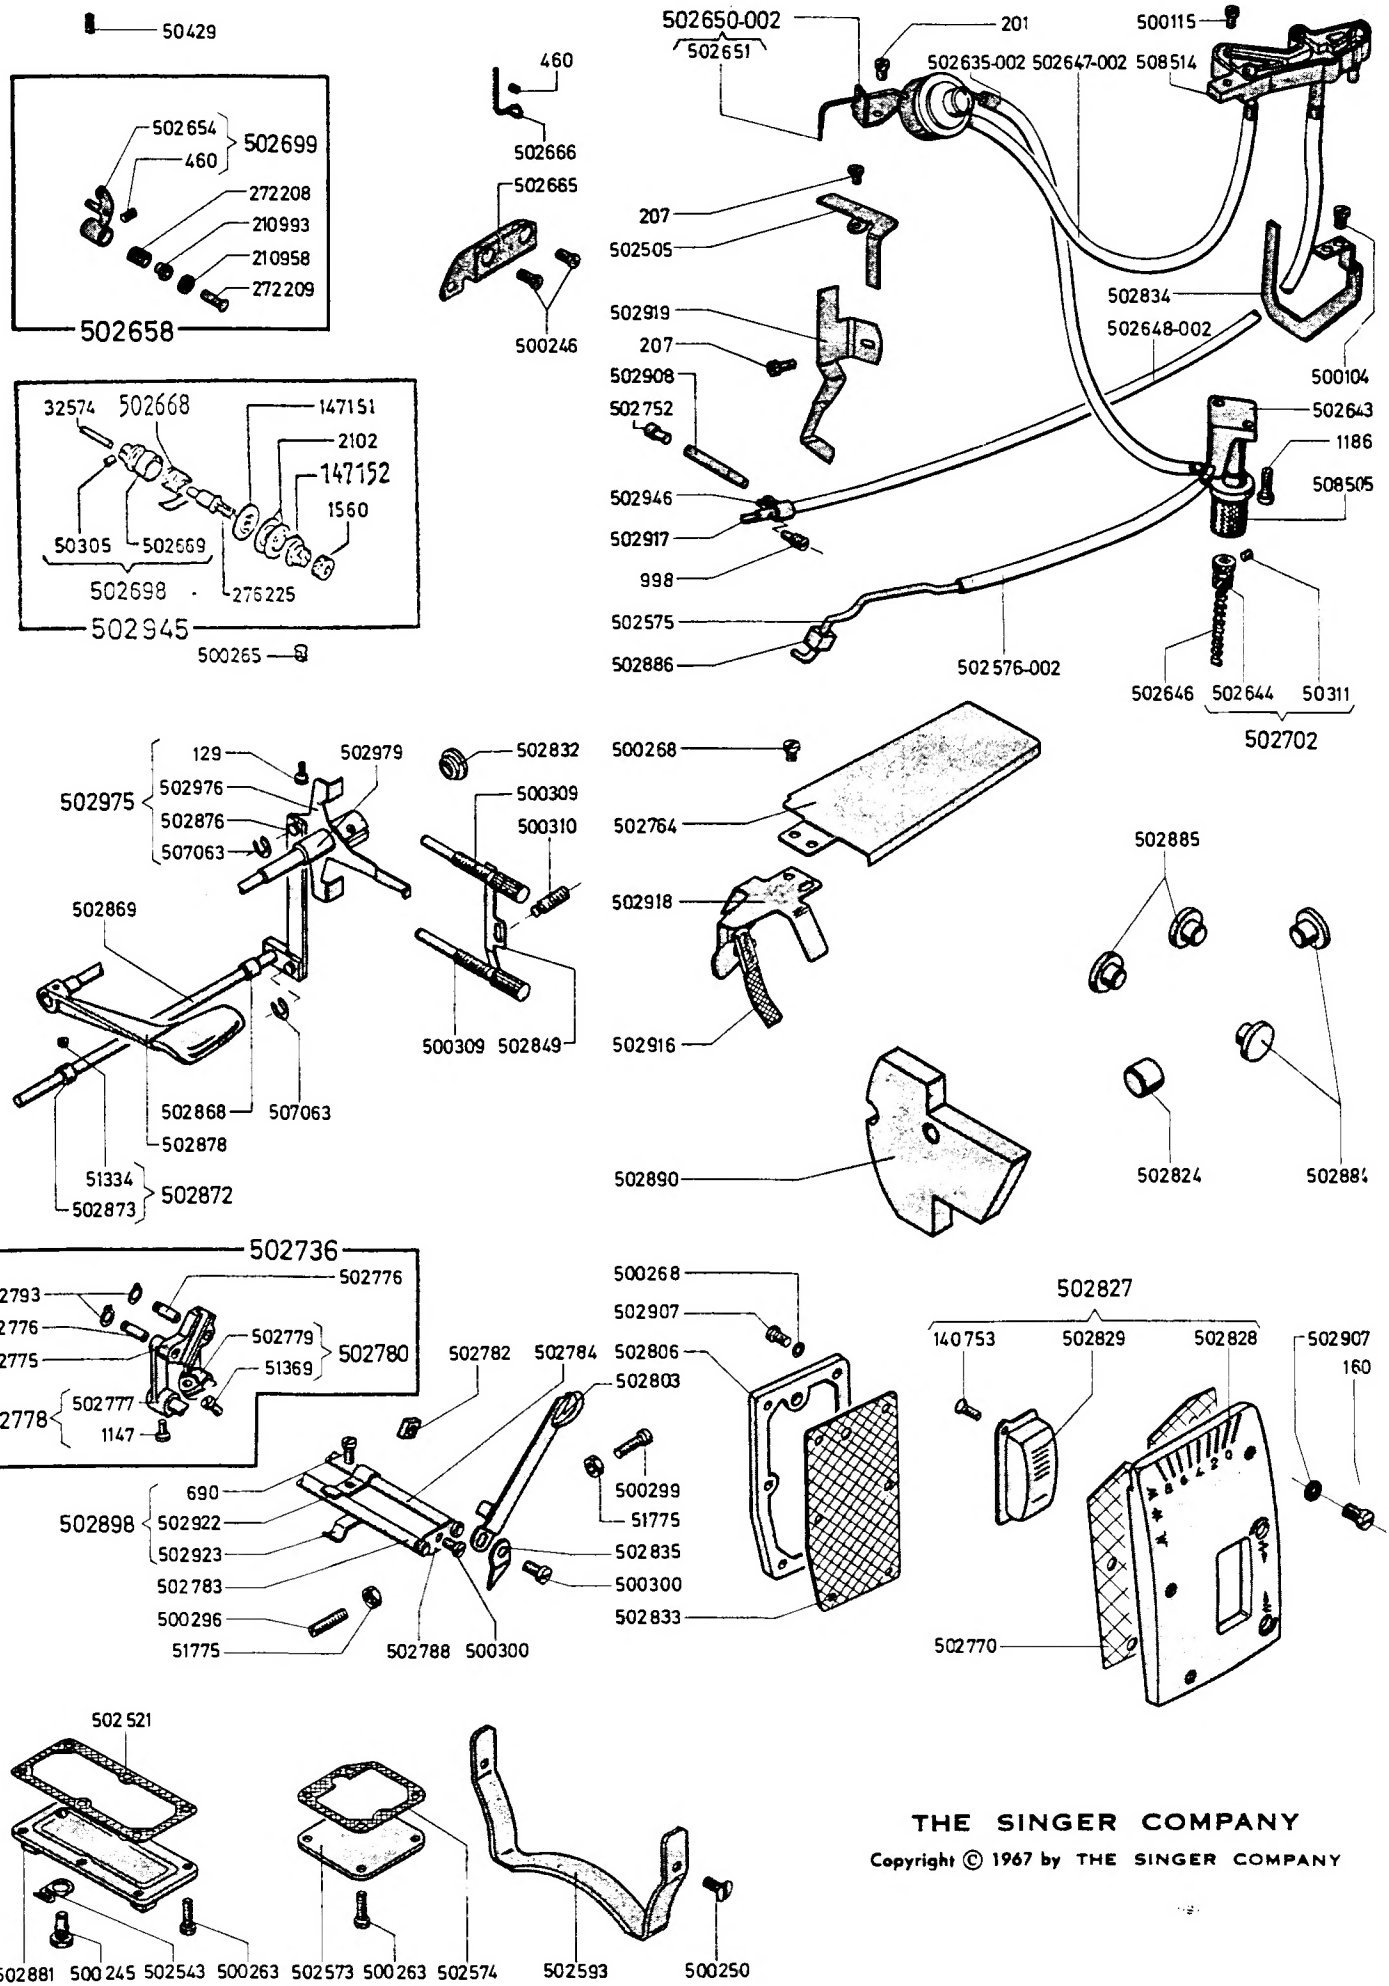


THE SINGER COMPANY
Copyright © 1967 by THE SINGER COMPANY

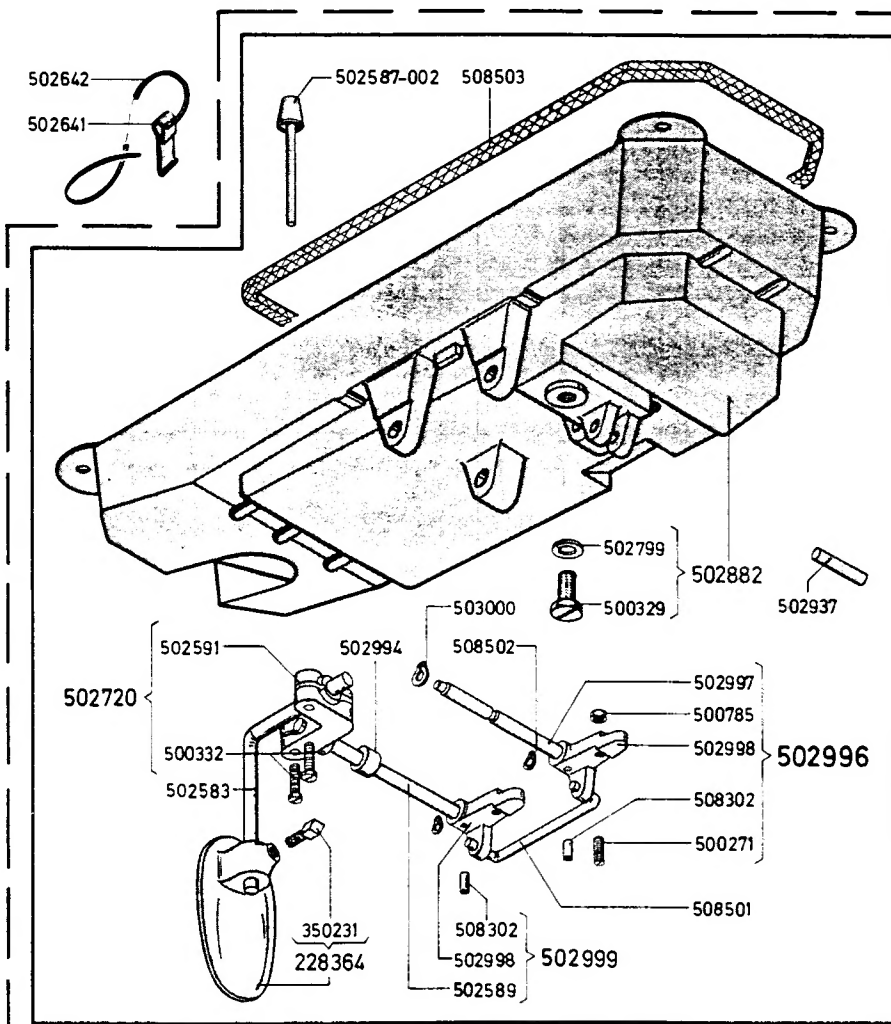

MACHINES 457 G115, 457 G116
AND 457 G117 ONLY

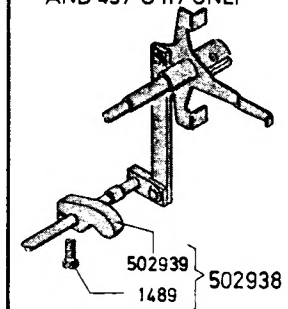


502842



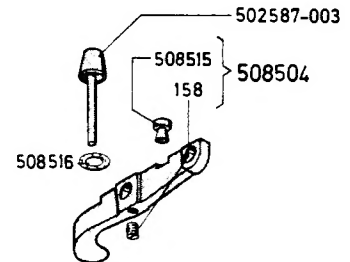


MACHINES 457 G115, 457 G116
AND 457 G117 ONLY

502883

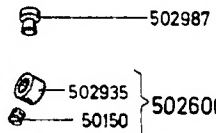


MACHINE 457 G105 ONLY

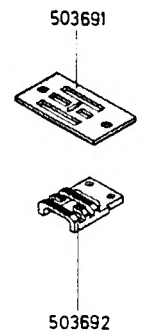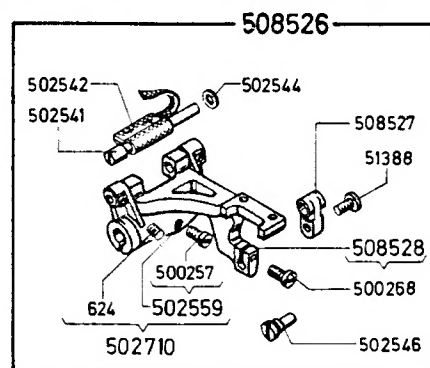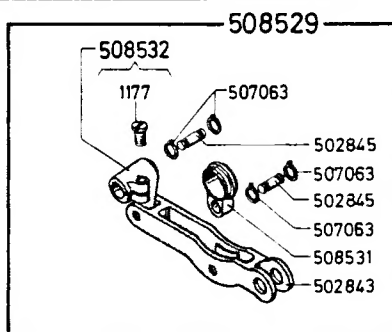


MACHINE 457 G116 ONLY







MACHINES 457 G116 AND 457 G117 ONLY

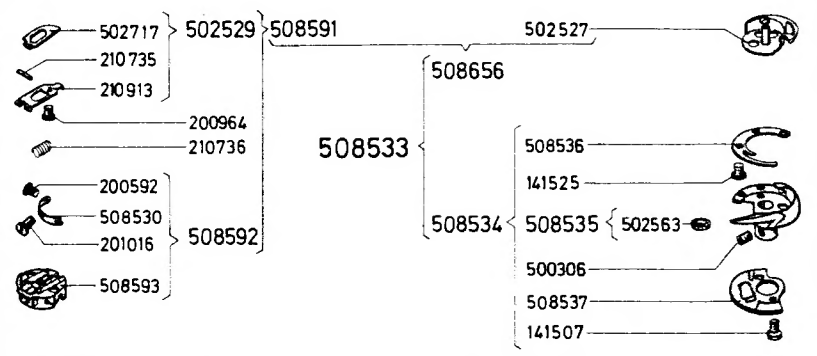

MACHINE
457 G117 ONLY

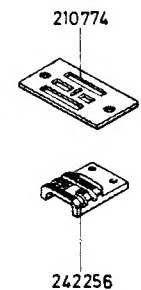

  ACCESSORIES FOR 457 G 105, 457 G 115 457 G 116, 457 G 117

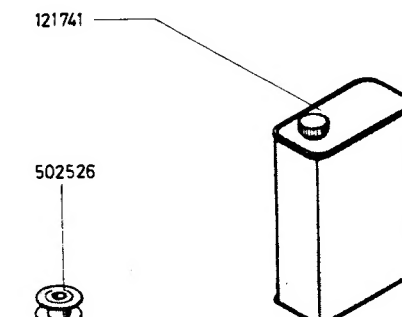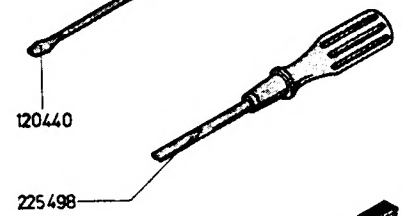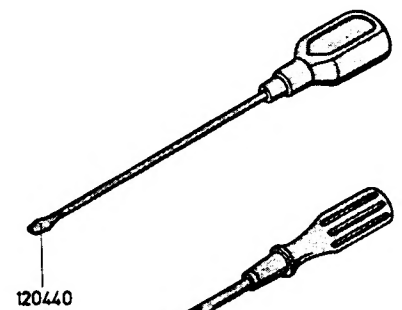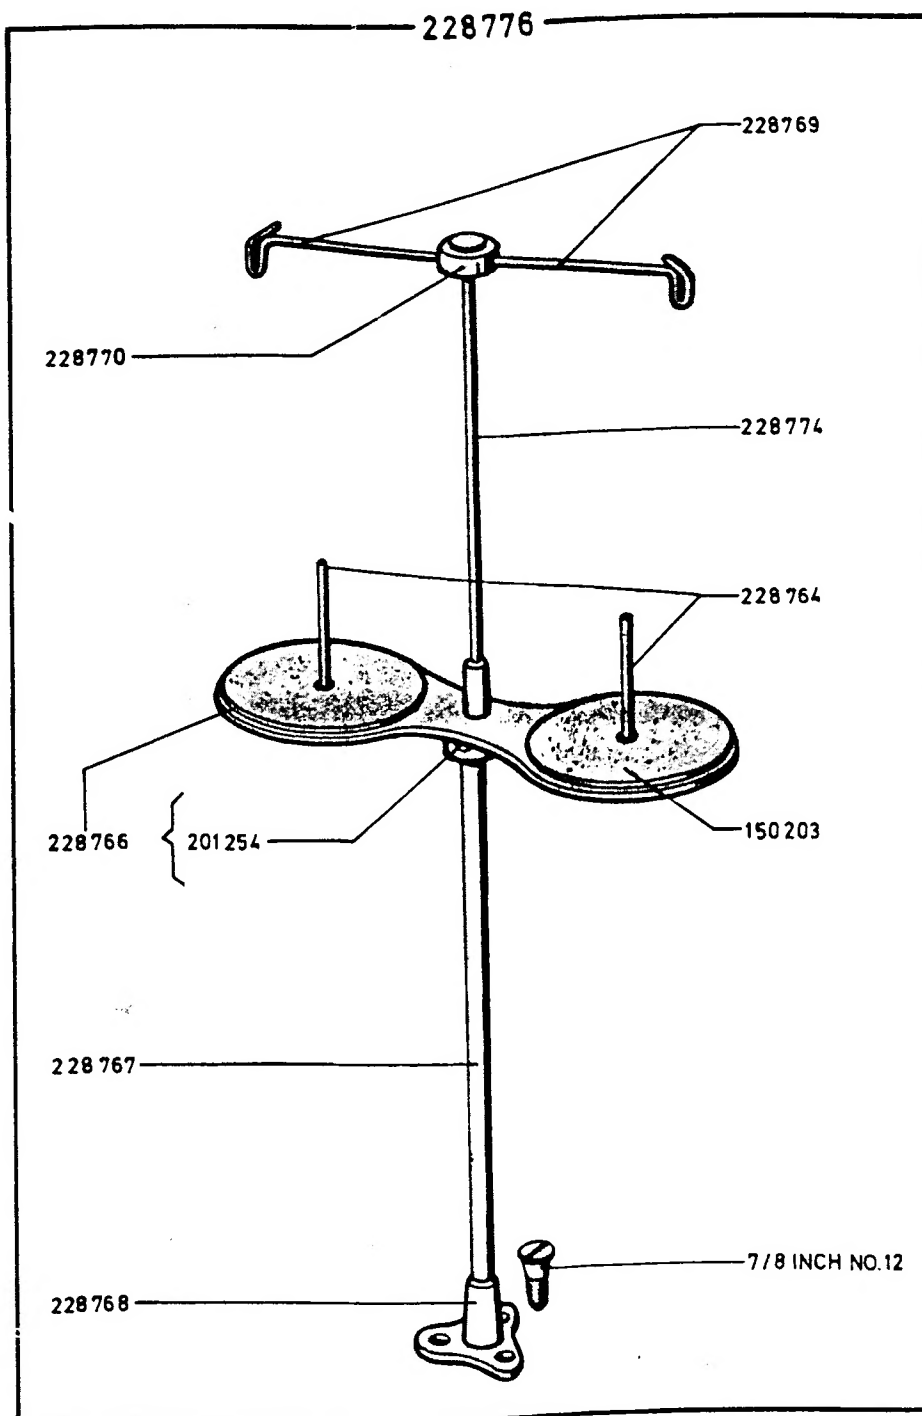

| PART NO. | FOR CLASS 457 G | | | | DESCRIPTION | PART NO. | FOR CLASS 457 G | | | | DESCRIPTION |
|------------|-----------------|-----|-----|-----|---|------------|-----------------|-----|-----|-----|---|
| | 105 | 115 | 116 | 117 | | | 105 | 115 | 116 | 117 | |
| NO. 12 | x | x | x | x | BOBBIN WINDER WOOD SCREW (3/4 INCH) (2) | 051388-850 | x | x | x | x | FEED BAR LIFTING LINK HINGE PIN CAP SCREW |
| NO. 12 | x | x | x | x | THREAD UNWINDER WOOD SCREW (7/8 INCH) (3) | 051775-850 | x | x | x | x | NEEDLE VIBRATING ADJUSTING LEVER STOP SCREW NUT (2) |
| 000061-850 | x | x | x | x | ROTARY TAKE-UP GUARD HINGE SCREW | 120440 | x | x | x | x | SCREW DRIVER |
| 000086-850 | x | x | x | x | KNEE LIFTER LIFTING LINK SCREW | 121741 | x | x | x | x | ONE QUART CAN FILLED WITH LIGHT GRADE OIL |
| 000129-850 | x | - | - | - | FEED REGULATING SHAFT INDICATOR LEVER PINCH SCREW | 140145-803 | x | x | x | x | KNEE LIFTER ROCK FRAME HINGE SCREW |
| 000158-850 | - | x | x | x | FOOT CONTROL REVERSE FEED LEVER SET SCREW | 140172-850 | x | x | x | x | NEEDLE BAR CRANK STUD PINCH SCREW |
| 000160-850 | x | x | x | x | NEEDLE BAR YOKE CONNECTING LINK HINGE BEARING PINCH SCREW | 140346-833 | x | x | x | x | FEED DRIVING CONNECTION CARRIER FRAME BEARING STUD SET SCREW (RIGHT) |
| 000160-850 | x | x | x | x | NEEDLE POSITION ADJUSTING ECCENTRIC SLIDE BLOCK BRACKET SCREW (2) | 140753-850 | x | x | x | x | STITCH LENGTH INDICATOR PLATE SCREW (2) |
| 000160-850 | x | x | x | x | ARM COVER (FRONT) SCREW (3) | 141507-803 | x | x | x | x | HOOK NEEDLE GUARD AND COUNTER- BALANCE SCREW |
| 000160-850 | x | x | x | x | FEED REGULATING CONNECTION SHAFT CRANK PINCH SCREW | 141525-806 | x | x | x | x | HOOK GIB SCREW (3) |
| 000176-850 | x | x | x | x | ATTACHMENT SCREW | 141566-833 | x | x | x | x | MACHINE PULLEY POSITION SCREW |
| 000190-850 | x | x | x | x | BOBBIN CASE STOP SCREW | 141567-833 | x | x | x | x | MACHINE PULLEY SET SCREW |
| 000199-850 | x | x | x | x | KNEE LIFTER ROCK FRAME HINGE STUD LOCK SCREW | 143014 | x | x | x | x | HOOK DRIVING SHAFT BEVEL GEAR CPL. TWO 1259 |
| 000201-850 | x | x | x | x | OIL SIGHT BODY SCREW (2) | 144465 | x | x | x | x | WRENCH (1/8 INCH HEXAGON) |
| 000207-803 | x | x | x | x | ARM HEAD OIL DRAIN WICK CLAMP SCREW (2) | 147151 | x | x | x | x | TENSION RELEASING DISC |
| 000223-850 | x | x | x | x | NEEDLE SET SCREW | 147152 | x | x | x | x | TENSION SPRING |
| 000237-833 | x | x | x | x | THREAD CUTTER (ON ROTARY TAKE-UP GUARD) SCREW | 150203 | x | x | x | x | THREAD UNWINDER SPOOL REST CUSHION (FELT) (2) |
| 000238-850 | x | x | x | x | NEEDLE BAR THREAD GUIDE SET SCREW | 182514-819 | x | x | x | x | THREAD CUTTER (ON FACE PLATE) ADJUSTING SCREW NUT |
| 000238-850 | x | x | x | x | BED SLIDE SPRING SCREW (2) | 200056-805 | x | x | x | x | BOBBIN WINDER STOP LATCH SCREW |
| 000289-850 | x | x | x | x | CLOTH GUIDE THUMB SCREW | 200082-804 | x | x | x | x | BOBBIN WINDER TENSION BRACKET SCREW |
| 000449-830 | x | x | x | x | FEED DRIVING ECCENTRIC SET SCREW | 200113-806 | x | x | x | x | BOBBIN WINDER BRAKE CLAMP SCREW |
| 000457-830 | x | x | x | x | HOOK OIL BYPASS PLUG SCREW | 200113-850 | x | x | x | x | KNEE LIFTER LIFTING ROD COLLAR SET SCREW |
| 000457-830 | x | x | x | x | BOBBIN WINDER PULLEY SET SCREW | 200299-819 | x | x | x | x | BOBBIN WINDER STOP LATCH TRIP HINGE SCREW |
| 000460-833 | x | x | x | x | ARM SHAFT OIL SLINGER AND PINION SET SCREW | 200393-833 | x | x | x | x | FEED DRIVING ROCK SHAFT COLLAR SET SCREW (4) |
| 000460-833 | x | x | x | x | PRETENSION BRACKET SCREW | 200592-803 | x | x | x | x | BOBBIN CASE CAP TENSION SPRING SCREW |
| 000460-833 | x | x | x | x | THREAD PULL OFF SET SCREW | 200964-803 | x | x | x | x | BOBBIN CASE LATCH STOP SCREW |
| 000624-833 | x | x | x | x | NEEDLE BAR YOKE CONNECTING LINK CARRIER FRAME SLIDE STUD SET SCREW (2) | 201016-803 | x | x | x | x | BOBBIN CASE CAP TENSION SPRING REGULATING SCREW |
| 000624-833 | x | x | x | x | FEED BAR HINGE PIN SET SCREW (2) | 201254-803 | x | x | x | x | THREAD UNWINDER SPOOL REST SET SCREW |
| 000690-850 | x | x | x | x | NEEDLE VIBRATING ADJUSTING SHAFT CLAMPING BRACKET PINCH SCREW | 201499-819 | x | x | x | x | BOBBIN WINDER TENSION STUD |
| 000792-850 | x | x | x | x | NEEDLE POSITION ADJUSTING LEVER SCREW (2) | 201572-819 | x | x | x | x | BOBBIN WINDER TENSION STUD THUMB NUT |
| 000858-833 | x | x | x | x | BED SHAFT BUSHING (FRONT, CENTER, BACK) SET SCREW (3) | 202478 | x | x | x | x | BOBBIN WINDER STOP LATCH TRIP LEVER |
| 000858-833 | x | x | x | x | HOOK DRIVING SHAFT BUSHING SET SCREW | 203244 | x | x | x | x | FEED DRIVING ROCK SHAFT COLLAR (2) WITH TWO EACH 200393 |
| 000858-833 | x | x | x | x | HOOK SHAFT PRESSURE BUSHING SET SCREW | 210505 | x | x | x | x | BED PLATE (BACK) |
| 000998-833 | x | x | x | x | OIL RETURN TUBE SCREW | 210735 | x | x | x | x | BOBBIN CASE LATCH FULCRUM PIN |
| 001147-850 | x | x | x | x | NEEDLE VIBRATING ADJUSTING GUIDE CRANK SET SCREW | 210736 | x | x | x | x | BOBBIN CASE LATCH SPRING |
| 001177-850 | x | x | x | x | FEED DRIVING CONNECTION CRANK PINCH SCREW | 210774 | - | - | - | - | THROAT PLATE, 53 NEEDLE HOLE FOR NEEDLE SIZES 12 AND 13 |
| 001186-850 | x | x | x | x | OIL PUMP MOUNTING SCREW (2) | 210913 | x | x | x | x | BOBBIN CASE LATCH |
| 001258-830 | x | x | x | x | OIL PUMP DRIVING GEAR SET SCREW (2) | 210958 | x | x | x | x | PRETENSION BRACKET COLLAR |
| 001259-830 | x | x | x | x | NEEDLE BAR CRANK STUD POSITION SCREW | 210993 | x | x | x | x | PRETENSION BRACKET SLEEVE |
| 001259-830 | x | x | x | x | BED SHAFT GEAR SET SCREW (2) | 214206 | x | x | x | x | ARM SHAFT CONNECTION BELT PULLEY SPRING FLANGE |
| 001259-830 | x | x | x | x | HOOK DRIVING SHAFT BEVEL GEAR SET SCREW (2) | 225381 | x | x | x | x | BOBBIN WINDER SPINDLE |
| 001259-830 | x | x | x | x | HOOK DRIVING SHAFT HELICAL GEAR SET SCREW (2) | 225444 | x | x | x | x | BOBBIN WINDER STOP LATCH |
| 001259-830 | x | x | x | x | HOOK SHAFT BEVEL GEAR SET SCREW (2) | 225453 | x | x | x | x | BOBBIN WINDER FRAME WITH 244071 AND 259660 |
| 001349-850 | x | x | x | x | PRESSER BAR LIFTER HINGE SCREW | 225454 | x | x | x | x | BOBBIN WINDER FRAME HINGE PIN |
| 001454-850 | x | x | x | x | ROTARY TAKE-UP GUARD SCREW, SHORT | 225455 | x | x | x | x | BOBBIN WINDER FRAME SPRING |
| 001472-850 | x | x | x | x | HOOK SHAFT BUSHING (FRONT) SET SCREW (3) | 225456 | x | x | x | x | BOBBIN WINDER FRAME SPRING PLUNGER |
| 001485-850 | x | x | x | x | ROTARY TAKE-UP GUARD SCREW, LONG | 225458 | x | x | x | x | BOBBIN WINDER STOP LATCH THUMB LEVER |
| 001489-850 | - | x | x | x | FOOT CONTROL REVERSE FEED CONNECTING SHAFT LEVER PINCH SCREW | 225459 | x | x | x | x | BOBBIN WINDER STOP LATCH THUMB LEVER HINGE AND JOINT STUD (2) |
| 001529-850 | x | x | x | x | ROTARY TAKE-UP GUARD COVER SPRING CATCH SCREW NUT | 225461 | x | x | x | x | BOBBIN WINDER TENSION BRACKET WITH 201499 |
| 001560-850 | x | x | x | x | TENSION THUMB NUT | 225462 | x | x | x | x | BOBBIN WINDER TENSION BRACKET CPL. 13710, 201572, 225461 AND TWO 2102 |
| 001654-850 | x | x | x | x | THREAD RETAINER LOCK NUT | 225491 | x | x | x | x | MACHINE REST PIN (WOOD) |
| 001747-850 | x | x | x | x | TENSION RELEASER ADJUSTING SCREW LOCK NUT | 225498 | x | x | x | x | SCREW DRIVER |
| 1906-12-1 | x | x | x | x | NEEDLE (3) | 225554 | x | x | x | x | WRENCH |
| 1906-14-1 | x | x | x | x | NEEDLE (1-2) | 227227 | x | x | x | x | KNEE LIFTER LIFTING ROD COLLAR CPL. TWO 200113 |
| 002102 | x | x | x | x | TENSION DISC (2) | 228026 | x | x | x | x | BOBBIN WINDER TENSION BRACKET SCREW WASHER |
| 002102 | x | x | x | x | BOBBIN WINDER TENSION DISC (2) | 228364 | x | x | x | x | KNEE LIFTER KNEE PLATE CPL. 350251 |
| 012361 | x | x | x | x | MACHINE HINGE CONNECTION (2) | 228476 | x | x | x | x | SCREW DRIVER (BOBBIN CASE) |
| 013710 | x | x | x | x | BOBBIN WINDER TENSION SPRING | 228764 | x | x | x | x | THREAD UNWINDER SPOOL PIN (2) |
| 032574 | x | x | x | x | TENSION RELEASING PIN | 228766 | x | x | x | x | THREAD UNWINDER SPOOL REST WITH 201254 |
| 050150-833 | x | - | - | - | FEED REVERSING FOOT CONTROL LEVER PIN COLLAR SET SCREW | 228767 | x | x | x | x | THREAD UNWINDER SPOOL REST ROD |
| 050305-850 | x | x | x | x | THREAD TAKE-UP SPRING REGULATOR SET SCREW | 228768 | x | x | x | x | THREAD UNWINDER SPOOL STAND |
| 050311-830 | x | x | x | x | OIL PUMP GEAR SET SCREW (2) | 228769 | x | x | x | x | THREAD UNWINDER THREAD GUIDE (2) |
| 050429-833 | x | x | x | x | PRETENSION BRACKET SCREW | 228770 | x | x | x | x | THREAD UNWINDER THREAD GUIDE HOLDER |
| 050429-833 | x | x | x | x | THREAD CUTTER (ON FACE PLATE) ADJUSTING SCREW | 228774 | x | x | x | x | THREAD UNWINDER THREAD GUIDE ROD |
| 050578-850 | x | x | x | x | FEED BAR LIFTING LINK HINGE PIN PINCH SCREW | 228776 | x | x | x | x | THREAD UNWINDER CPL. (FOR TWO SPOOLS) 228766, 228767, 228768, 228770, 228774, TWO EACH 150203, 228764, 228769 AND THREE WOOD SCREWS |
| 050624-830 | x | x | x | x | FEED DOG SCREW (2) | 230743-803 | x | x | x | x | HINGE SCREW THRUST WASHER |
| 051334-830 | x | x | x | x | FEED REGULATING CONNECTION SHAFT COLLAR SET SCREW (2) | 231337 | x | x | x | x | CLOTH GUIDE |
| 051369-850 | x | x | x | x | NEEDLE VIBRATING ADJUSTING CRANK PINCH SCREW | 242256 | - | - | - | - | FEED DOG |
| 051369-850 | x | x | x | x | NEEDLE POSITION ADJUSTING ECCENTRIC POSITION SPRING SCREW (2) | 244071 | x | x | x | x | BOBBIN WINDER FRAME OIL PACKING (WICK) |
| 051369-850 | x | x | x | x | NEEDLE BAR CONNECTING STUD GUIDE BLOCK SCREW (2) | 259428 | x | x | x | x | BOBBIN WINDER BRAKE (LEATHER) |
| 051369-850 | x | x | x | x | NEEDLE BAR CONNECTING LINK CLAMPING PLATE SCREW (2) | 259429 | x | x | x | x | BOBBIN WINDER BRAKE CLAMP |
| 051369-850 | x | x | x | x | PRESSER BAR POSITION GUIDE PINCH SCREW | 259462 | x | x | x | x | UNIVERSAL BOBBIN WINDER CPL. 200056, 200082, 200113, 200299, 202478, 225381, 225444, 225453 TO 225456, 225458, 225462, 259428, 259429, 259662, 259930, TWO EACH 225459 AND WOOD SCREW |
| 051369-850 | x | x | x | x | FEED DRIVING CONNECTION CARRIER FRAME SLIDE STUD SET SCREW | 259660 | x | x | x | x | BOBBIN WINDER FRAME OIL WELL WASHER |
| 051369-850 | x | x | x | x | | 259662 | x | x | x | x | BOBBIN WINDER AND TENSION BRACKET BASE |
| | | | | | | 259930 | x | x | x | x | BOBBIN WINDER PULLEY WITH 457 |

| FOR CLASS 457 G | | DESCRIPTION | FOR CLASS 457 G | | DESCRIPTION |
|-----------------|-----------------|---|-----------------|-----------------|--|
| PART NO. | 105 115 116 117 | | PART NO. | 105 115 116 117 | |
| Z70161 | x x x x | NEEDLE BAR CRANK STUD PIN | 500786-850 | x x x x | HOOK OIL REGULATING SCREW NUT |
| Z70266 | x x x x | NEEDLE BAR CONNECTING LINK NEEDLE BEARING | 502505 | x x x x | ARM HEAD OIL DRAIN WICK CLAMP (FRONT) |
| Z71808 | x x x x | HOOK SHAFT OIL FILTER WICK HOLDER SEAL | 502506 | x x x x | OIL PUMP DRIVING GEAR |
| Z72128 | x x x x | ROTARY TAKE-UP GUARD COVER WINDOW | 502508 | x x x x | ARM SHAFT CONNECTION BELT |
| Z72142 | x x x x | ARM SHAFT BALL BEARING | 502509 | x x x x | ARM SHAFT CONNECTION BELT PULLEY |
| Z72143 | x x x x | ARM SHAFT BALL BEARING | 502510 | x x x x | ARM SHAFT OIL SHIELD |
| Z72144 | x x x x | BED SHAFT BALL BEARING | 502511-002 | x x x x | ARM SHAFT OIL SLINGER AND PINION SPACER |
| Z72208 | x x x x | PRETENSION BRACKET SPRING | 502515 | x x x x | BED SHAFT BUSHING (FRONT) |
| Z72209 | x x x x | PRETENSION BRACKET STUD | 502516 | x x x x | BED SHAFT BUSHING OIL WICK |
| Z76025 | x x x x | PRESSER BAR BALL | 502517 | x x x x | BED CONNECTION BELT PULLEY |
| Z76027 | x x x x | PRESSER BAR LIFTER | 502518-002 | x x x x | BED CONNECTION BELT PULLEY SPACER |
| Z76051 | x x x x | THREAD GUIDE ON FACE PLATE | 502519 | x x x x | BED SHAFT GEAR |
| Z76114 | x x x x | NEEDLE BAR CONNECTING LINK THRUST WASHER | 502521 | x x x x | BED SHAFT GEAR BOX COVER GASKET |
| Z76225 | x x x x | TENSION STUD | 502522 | x x x x | BED SLIDE |
| Z76236 | x x x x | HOOK SHAFT OIL FILTER WICK HOLDER | 502526 | x x x x | BOBBIN (1+2) |
| Z76508 | x x x x | ROTARY TAKE-UP GUARD SPRING CATCH | 502527 | x x x x | BOBBIN CASE BASE |
| Z76536 | x x x x | PRESSER BAR BUSHING | 502528 | x x - - | BOBBIN CASE CAP |
| 350231-850 | x x x x | KNEE LIFTER KNEE PLATE SET SCREW | 502529 | x x x x | BOBBIN CASE LATCH CPL. 210735, 210913, 502717 |
| 500067-830 | x x x x | NEEDLE POSITION ADJUSTING ECCENTRIC STOP SCREW SET SCREW (2) | 502530 | x x - - | BOBBIN CASE CAP CPL. 200964, 210736, 502529, 502716 |
| 500104-850 | x x x x | ARM OIL SHIELD (AERATED PLASTIC) RETAINER SCREW (2) | 502531 | x x - - | BOBBIN CASE CPL. 502527, 502530 |
| 500115-850 | x x x x | OIL DISTRIBUTOR PLATE SCREW | 502532 | x x - - | HOOK BODY WITH 502563 |
| 500212-833 | x x x x | FEED DRIVING CONNECTION CARRIER FRAME BEARING STUD (LEFT) SET SCREW | 502533 | x x x x | HOOK DRIVING SHAFT BUSHING OIL WICK |
| 500244-850 | x x x x | ROTARY TAKE-UP SCREW (2) | 502534 | x x - - | HOOK AND BOBBIN CASE CPL. 502531, 502562 |
| 500244-850 | x x x x | BED PLATE SCREW (BACK) (2) | 502536 | x x x x | BOBBIN CASE STOP |
| 500244-833 | x x x x | THROAT PLATE SCREW (2) | 502537 | x x x x | FACE PLATE |
| 500245-805 | x x x x | BED SHAFT GEAR BOX OVERFLOW AND DRAIN PLUG SCREW | 502538 | x x - - | HOOK GIB |
| 500246-850 | x x x x | THREAD GUIDE SCREW (2) | 502539-002 | x x - - | HOOK NEEDLE GUARD COUNTERBALANCE |
| 500246-850 | x x x x | FACE PLATE SCREW (8) | 502540-002 | x x x x | FEED BAR |
| 500246-850 | x x x x | ROTARY TAKE-UP GUARD SPRING CATCH SCREW | 502541 | x x x x | FEED BAR HINGE PIN |
| 500247-833 | x x x x | HOOK OIL REGULATING SCREW | 502542 | x x x x | FEED BAR HINGE PIN OILING FELT |
| 500250-850 | x x x x | MACHINE LEG SCREW (2) | 502543 | x x x x | FEED BAR HINGE PIN OILING FELT CLAMP |
| 500251-850 | x x x x | NEEDLE BAR CONNECTING STUD PINCH SCREW | 502544 | x x x x | FEED BAR HINGE PIN THRUST WASHER (2) |
| 500256-850 | x x x x | PRESSER FOOT SCREW | 502545 | x x - x | FEED BAR LIFTING LINK |
| 500257-850 | x x x x | FEED DRIVING ROCK SHAFT CRANK PINCH SCREW | 502546 | x x x x | FEED BAR LIFTING LINK HINGE PIN |
| 500259-803 | x x x x | TENSION RELEASER ADJUSTING SCREW | 502558 | x x x x | FEED DRIVING ROCK SHAFT BUSHING (BACK) |
| 500260-830 | x x x x | PRESSER BAR SPRING SCREW | 502559 | x x x x | FEED DRIVING ROCK SHAFT CRANK WITH 500257 |
| 500261-850 | x x x x | PRESSER BAR SPRING SCREW STUD | 502560-002 | x x x x | FEED DRIVING ROCK SHAFT OIL WICK |
| 500262-833 | x x x x | THREAD GUIDE (ON FACE PLATE) SCREW | 502562 | x x - - | HOOK CPL. 141507, 502532, 502538, 502539-002, 502563, TWO 500306, THREE 141525 |
| 500262-833 | x x x x | THREAD CUTTER (ON FACE PLATE) SCREW | 502563 | x x x x | HOOK OIL RETAINING WASHER |
| 500263-850 | x x x x | BED SHAFT GEAR BOX COVER SCREW (6) | 502565 | x x x x | HOOK DRIVING SHAFT |
| 500263-850 | x x x x | FEED DRIVING CONNECTION CARRIER FRAME STOP SCREW (2) | 502566 | x x x x | HOOK DRIVING SHAFT BUSHING |
| 500263-850 | x x x x | HOOK SHAFT GEAR BOX COVER SCREW (4) | 502567 | x x x x | HOOK DRIVING SHAFT HELICAL GEAR |
| 500264-830 | x x x x | HOOK SHAFT BUSHING (FRONT) SET SCREW | 502568 | x x x x | HOOK SHAFT |
| 500265-833 | x x x x | THREAD REGULATOR SET SCREW | 502569 | x x x x | HOOK SHAFT BEVEL GEAR |
| 500267-850 | x x x x | ARM COVER (TOP) SCREW (LONG) (2) | 502572 | x x x x | HOOK SHAFT BUSHING CAP GASKET |
| 500268-850 | x x x x | ARM COVER (BACK) SCREW (6) | 502573 | x x x x | HOOK SHAFT GEAR BOX COVER |
| 500268-850 | x x x x | ARM COVER (TOP) SCREW (SHORT) (2) | 502574 | x x x x | HOOK SHAFT GEAR BOX COVER GASKET |

| PART NO. | FOR CLASS 457 G | | | | DESCRIPTION | PART NO. | FOR CLASS 457 G | | | | DESCRIPTION |
|------------|-----------------|-----|-----|-----|--|----------|-----------------|-----|-----|-----|--|
| | 105 | 115 | 116 | 117 | | | 105 | 115 | 116 | 117 | |
| 502654 | x | x | x | x | PRETENSION BRACKET | 502779 | x | x | x | x | NEEDLE VIBRATING ADJUSTING CRANK |
| 502655 | x | x | x | x | ROTARY TAKE-UP | 502780 | x | x | x | x | NEEDLE VIBRATING ADJUSTING CRANK |
| 502656 | x | x | x | x | ROTARY TAKE-UP GUARD | | | | | | CPL. 51369, 502779 |
| 502657 | x | x | x | x | ROTARY TAKE-UP GUARD COVER | 502781 | x | x | x | x | NEEDLE POSITION ADJUSTING ECCENTRIC |
| 502658 | x | x | x | x | PRETENSION BRACKET CPL. 210958, 210993, 272208, 272209, 502699 | 502782 | x | x | x | x | SLIDE BLOCK |
| 502659 | x | x | x | x | ROTARY TAKE-UP MOUNTING DISC | | | | | | NEEDLE VIBRATING ADJUSTING BRACKET |
| 502660-002 | x | x | x | x | TENSION RELEASER | 502783 | x | x | x | x | SLIDE BLOCK |
| 502661-002 | x | x | x | x | TENSION RELEASER CPL. 1747, 500259, 502660-002 | 502784 | x | x | x | x | NEEDLE VIBRATING ADJUSTING GUIDE |
| 502662 | x | x | x | x | TENSION RELEASER SPRING | 502785 | x | x | x | x | CRANK SHAFT |
| 502665 | x | x | x | x | THREAD GUIDE (FRONT OF ARM) | | | | | | NEEDLE VIBRATING ADJUSTING CRANK SHAFT |
| 502666 | x | x | x | x | THREAD PULL OFF | 502786 | x | x | x | x | NEEDLE BAR YOKE CONNECTING LINK |
| 502667 | x | x | x | x | THREAD RETAINER | 502787 | x | x | x | x | HINGE BEARING STUD |
| 502668 | x | x | x | x | THREAD TAKE-UP SPRING | | | | | | KNEE LIFTER ROCK FRAME |
| 502669 | x | x | x | x | THREAD TAKE-UP SPRING REGULATOR | 502788 | x | x | x | x | NEEDLE VIBRATING ECCENTRIC SHAFT WITH TWO 502771 |
| 502670 | x | x | x | x | THREAD CUTTER ON ROTARY TAKE-UP GUARD | | | | | | NEEDLE VIBRATING ADJUSTING SHAFT |
| 502672 | x | x | x | x | NEEDLE BAR YOKE BEARING (BACK) | 502789 | x | x | x | x | RETAINER |
| 502674 | x | x | x | x | NEEDLE BAR YOKE BEARING (FRONT) | | | | | | NEEDLE BAR YOKE CONNECTING LINK |
| 502675-002 | x | x | - | x | FEED DRIVING ROCK SHAFT CRANK CPL. 51388, 502541, 502542, 502544, 502545, 502546, 502710, 502711-002 | 502790 | x | x | x | x | CARRIER FRAME STUD |
| | | | | | | 502791 | x | x | x | x | NEEDLE POSITION ADJUSTING LEVER |
| 502676 | x | x | x | x | HOOK SHAFT PRESSURE BUSHING CPL. 502581, 502582 | 502792 | x | x | x | x | NEEDLE POSITION ADJUSTING ECCENTRIC |
| 502677 | x | x | x | x | HOOK SHAFT WITH OIL FILTER CPL. 271808, 276236, 502568, 502928, 502958 | | | | | | SLIDE BLOCK BRACKET CPL. 502791, TWO EACH 500067, 500298 |
| 502679 | x | x | x | x | KNEE LIFTER ROCK FRAME HINGE STUD PIN | 502793 | x | x | x | x | NEEDLE BAR YOKE CONNECTING LINK |
| 502681-002 | x | x | x | x | ARM SHAFT CPL. 1259, 140172, 502723-002 | | | | | | STUD SNAP RING (2) |
| 502682 | x | x | x | x | ARM SHAFT CONNECTION BELT PULLEY CPL. 214206, 500272, 500274, 502509 | 502793 | x | x | x | x | NEEDLE VIBRATING ADJUSTING BRACKET |
| 502687-002 | x | x | x | x | NEEDLE BAR YOKE WITH OIL FELT CPL. 502594, 502608, 502688-002 | | | | | | STUD SNAP RING (2) |
| 502688-002 | x | x | x | x | NEEDLE BAR YOKE | 502794 | x | x | x | x | NEEDLE POSITION ADJUSTING ECCENTRIC |
| 502693 | x | x | x | x | NEEDLE BAR CONNECTING STUD CPL. 500251, 502602, 502603 | | | | | | POSITION SPRING |
| 502694 | x | x | x | x | NEEDLE BAR CRANK STUD CPL. 270161, 502607 | 502799 | x | x | x | x | MACHINE BASE AND OIL RESERVOIR DRAIN |
| 502696 | x | x | x | x | PRESSER BAR POSITION GUIDE CPL. 51369, 502645 | 502800 | x | x | x | x | PLUG SCREW GASKET |
| 502698 | x | x | x | x | THREAD TAKE-UP SPRING REGULATOR CPL. 50305, 502669 | | | | | | NEEDLE BAR YOKE CONNECTING LINK |
| 502699 | x | x | x | x | PRETENSION BRACKET CPL. 460, 502654 | 502801 | x | x | x | x | CARRIER FRAME DISC SPRING |
| 502702 | x | x | x | x | OIL PUMP GEAR CPL. 502644, TWO 50311 | 502802 | x | x | x | x | NEEDLE BAR YOKE CONNECTING LINK STUD |
| 502703 | x | x | x | x | BED SHAFT BUSHING (FRONT) CPL. 502515, 502516 | | | | | | NEEDLE BAR YOKE CONNECTING LINK |
| 502704 | x | x | x | x | BED CONNECTION BELT PULLEY CPL. 502517, TWO 500319 | 502802 | x | x | x | x | HINGE BEARING STUD SNAP RING (2) |
| 502705 | x | x | x | x | OIL PUMP DRIVING GEAR CPL. 502506, TWO 1258 | 502803 | x | x | x | x | NEEDLE BAR YOKE CONNECTING LINK |
| 502710 | x | x | x | x | FEED DRIVING ROCK SHAFT CRANK CPL. 502559, TWO 624 | 502805 | x | x | x | x | CARRIER FRAME SNAP RING |
| 502711-002 | x | x | - | x | FEED BAR WITH PINCH SCREW CPL. 50578, 502540-002 | 502806 | x | x | x | x | NEEDLE VIBRATING ADJUSTING LEVER |
| 502712 | x | x | x | x | BED SHAFT GEAR CPL. 502519, TWO 1259 | 502811 | x | x | x | x | NEEDLE BAR YOKE CONNECTING LINK |
| 502713 | x | x | x | x | HOOK DRIVING SHAFT BUSHING CPL. 502533, 502566 | 502812 | x | x | x | x | CARRIER FRAME |
| 502714 | x | x | x | x | HOOK DRIVING SHAFT HELICAL BEVEL GEAR CPL. 502567, TWO 1259 | | | | | | ARM COVER (BACK) |
| 502715 | x | x | x | x | HOOK SHAFT BEVEL GEAR CPL. 502569, TWO 1259 | 502817 | x | x | x | x | ARM COVER (TOP) |
| 502716 | x | x | - | - | BOBBIN CASE CAP CPL. 200592, 201016, 502528, 508530 | | | | | | MACHINE PULLEY CPL. 141566, 141567, 272142 |
| 502717 | x | x | x | x | BOBBIN CASE LATCH LEVER | 502817 | x | x | x | x | NEEDLE BAR YOKE CONNECTING LINK |
| 502720 | x | x | x | x | KNEE LIFTER ROCK SHAFT HUB CPL. 502591, TWO 500332 | 502818 | x | x | x | x | HINGE BEARING CPL. 502616, 502757 |
| 502723-002 | x | x | x | x | ARM SHAFT WITH NEEDLE BAR CRANK WITH 502927 | 502819 | x | x | x | x | HOOK GEAR BOX VENT CAP |
| 502736 | x | x | x | x | NEEDLE VIBRATING ADJUSTING BRACKET CPL. 502775, 502778, 502780, TWO 502776, TWO 502793 | | | | | | NEEDLE BAR YOKE CONNECTING LINK |
| 502751 | x | x | x | x | NEEDLE VIBRATING ECCENTRIC SHAFT BUSHING (BACK) PLUG | 502820 | x | x | x | x | CARRIER FRAME CPL. 502789, 502805, 502850, 502857, TWO 624 |
| 502752 | x | x | x | x | BED SHAFT BUSHING (CENTER) OIL TUBE PLUG | | | | | | NEEDLE POSITION ADJUSTING ECCENTRIC |
| 502752 | x | x | x | x | BED SHAFT PLUG | 502822 | x | x | x | x | CPL. 502776, 502781, 502793, TWO EACH 500302, 502762 |
| 502754 | x | x | x | x | NEEDLE VIBRATING ECCENTRIC SHAFT GEAR | | | | | | KNEE LIFTER ROCK FRAME CPL. 502679, 502758, 502786 |
| 502755 | x | x | x | x | NEEDLE VIBRATING ECCENTRIC SHAFT GEAR CPL. 500301, 502754 | 502823 | x | x | x | x | KNEE LIFTER LIFTING ROD WITH TWO 502830 |
| 502756 | x | x | x | x | NEEDLE VIBRATING ECCENTRIC SHAFT BUSHING (BACK) | 502824 | x | x | x | x | HOOK DRIVING SHAFT PLUG (FOR UN-USED BED HOLE) |
| 502757 | x | x | x | x | NEEDLE BAR YOKE CONNECTING LINK HINGE BEARING BUSHING (2) | 502825 | x | x | x | x | NEEDLE VIBRATING ECCENTRIC SHAFT |
| 502758 | x | x | x | x | KNEE LIFTER ROCK FRAME HINGE STUD | | | | | | BUSHING (FRONT) |
| 502760 | x | x | x | x | NEEDLE VIBRATING ECCENTRIC SHAFT BUSHING (FRONT) PLUG | 502826 | x | x | x | x | FEED DRIVING ROCK SHAFT BUSHING (FRONT) |
| 502761 | x | x | x | x | NEEDLE POSITION ADJUSTING ECCENTRIC | 502827 | x | x | x | x | ARM COVER (FRONT) CPL. 502828, 502829, TWO 140753 |
| 502762 | x | x | x | x | NEEDLE POSITION ADJUSTING ECCENTRIC BUSHING (SMALL) SNAP RING (2) | | | | | | ARM COVER (FRONT) |
| 502763 | x | x | x | x | ARM SHAFT BUSHING (CENTER) | 502828 | x | x | x | x | STITCH LENGTH INDICATOR PLATE |
| 502764 | x | x | x | x | OIL GUARD | 502829 | x | x | x | x | KNEE LIFTER LIFTING ROD GRIP RING (2) |
| 502768 | x | x | x | x | NEEDLE BAR YOKE CONNECTING LINK | 502830 | x | x | x | x | FEED DRIVING CONNECTION CARRIER FRAME |
| 502770 | x | x | x | x | ARM COVER (FRONT) GASKET | 502830 | x | x | x | x | SPRING STUD GRIP RING |
| 502771 | x | x | x | x | NEEDLE VIBRATING ECCENTRIC COMPOUND SPLIT PIN (2) | | | | | | ARM SHAFT BUSHING (CENTER) SCREW PLUG |
| 502772 | x | x | x | x | NEEDLE POSITION ADJUSTING ECCENTRIC REGULATING STUD | 502831 | x | x | x | x | FEED REGULATING SHAFT PLUG (FOR UN-USED HOLE) |
| 502775 | x | x | x | x | NEEDLE VIBRATING ADJUSTING BRACKET | 502832 | x | x | x | x | ARM COVER (BACK) GASKET |
| 502776 | x | x | x | x | NEEDLE VIBRATING ADJUSTING BRACKET STUD (2) | 502833 | x | x | x | x | ARM OIL SHIELD (AERATED PLASTIC) RETAINER |
| 502776 | x | x | x | x | NEEDLE POSITION ADJUSTING ECCENTRIC BUSHING (SMALL) SLIDE BLOCK STUD | 502835 | x | x | x | x | NEEDLE VIBRATING ADJUSTING LEVER |
| 502777 | x | x | x | x | NEEDLE VIBRATING ADJUSTING GUIDE CRANK | | | | | | OIL GUIDE |
| 502778 | x | x | x | x | NEEDLE VIBRATING ADJUSTING GUIDE CRANK CPL. 1147, 502777 | 502836 | x | x | x | x | BED SHAFT CPL. 502752, 502837 |
| | | | | | | 502837 | x | x | x | x | BED SHAFT |
| | | | | | | 502838 | x | x | x | x | BED SHAFT BUSHING (BACK) |
| | | | | | | 502839 | x | x | x | x | FEED DRIVING ECCENTRIC CPL. 449, 500308, 502840 |
| | | | | | | | | | | | FEED DRIVING ECCENTRIC |
| | | | | | | 502840 | x | x | x | x | FEED DRIVING CONNECTION CPL. 502843, 502844, 502847, TWO 502845, FOUR 507063 |
| | | | | | | 502841 | x | x | - | x | MACHINE BASE AND OIL RESERVOIR WITH KNEE LIFTER CPL. 228364, 502583, 502587-002 |
| | | | | | | 502842 | - | x | x | x | 502587-003, 502720, 502882, 502937, 502994, 502996, 502999, 503000, 508501, 508503, 508504, 508516, TWO 508502 |
| | | | | | | | | | | | FEED DRIVING CONNECTION LEVER |
| | | | | | | 502843 | x | x | x | x | FEED DRIVING CONNECTION LINK |
| | | | | | | 502844 | x | x | - | x | FEED DRIVING CONNECTION LEVER HINGE |
| | | | | | | 502845 | x | x | x | x | PIN (2) |
| | | | | | | | | | | | FEED DRIVING CONNECTION CRANK CPL. 1177, 502848 |
| | | | | | | 502847 | x | x | - | x | FEED DRIVING CONNECTION CRANK |
| | | | | | | 502848 | x | x | - | x | |

259462

